3030x2280
GABLE ROOF SHED

3030mm wide x 2280mm deep x 1830-2025mm high

YARD HQ


BEFORE YOU BEGIN:

To avoid any confusion with your new shed build, we strongly suggest that you unpack and identify each part before you begin to put it together.

PACKED BY:

Please quote this code for any correspondence back to the supplier

ASSEMBLY INSTRUCTIONS

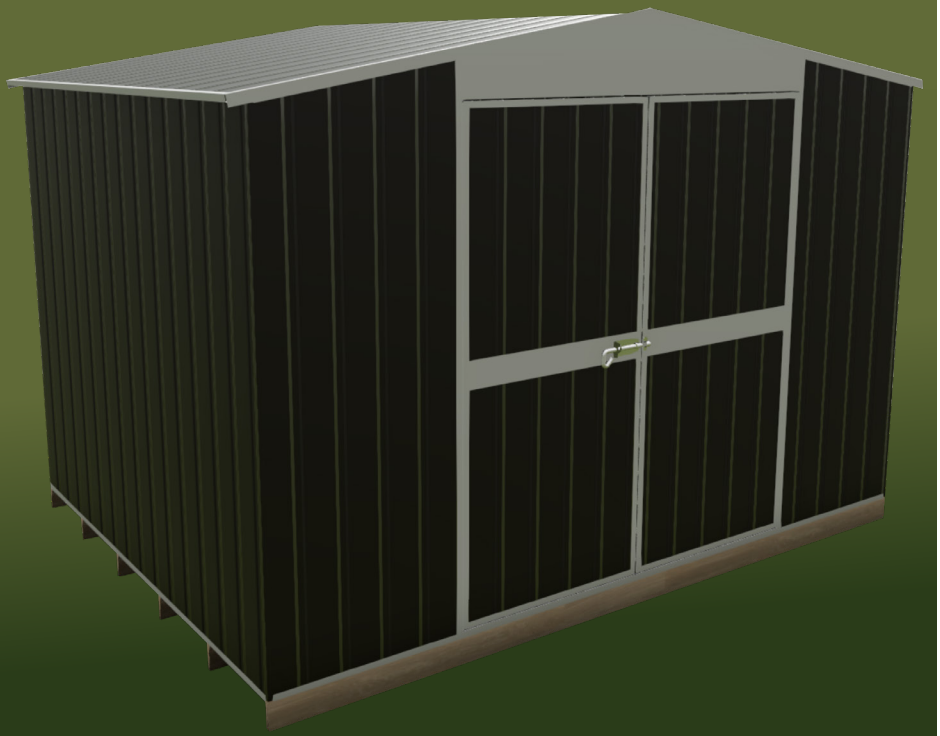

YOU SHOULD HAVE TWO PACKAGES:

- 1 cardboard package
- 1 plastic wrapped package

TOOLS REQUIRED:

- Battery or electric drill
- 3.3mm (1/8th inch) drill bit
- Riveter
- Tape measure
- Ladder
- Non-slip gloves, good shoes and goggles
- A set of helping hands

Some parts have sharp edges and should be handled very carefully. We recommend the use of protective gloves and footwear when assembling.

DO NOT attempt to erect this shed in windy weather.
All dimensions are approximate.

KITSET ASSEMBLY SERVICES

CALL 0508 454 873
for an installer near you


ASSEMBLY OVERVIEW

These instructions are designed to guide you though the process of building your new garden shed. It is a simple process of joining sheets together before adding top and bottom channels to form a shed panel. These panels are then joined together to make your shed.

When fitting the channels to the sheets, the high side of the channel should go on the inside of the sheet, ensuring that any water that collects in the bottom channel will run over the lower side and run away rather than into the shed.
















Rivets are fitted by drilling through outside of the channel into the ribs of the sheet, usually at every second rib. It is also important to fit at least one rivet per sheet from the inside of the channel into the pan of the sheet, close to a rib. Extra rivets should be fitted on the inside of the channel into the pan of the sheets in high wind areas.

It is critical that you remove the swarf (the metal filings created when drilling) from the panels and channels as you assemble them as these will rust quickly and could cause corrosion issues with your shed!

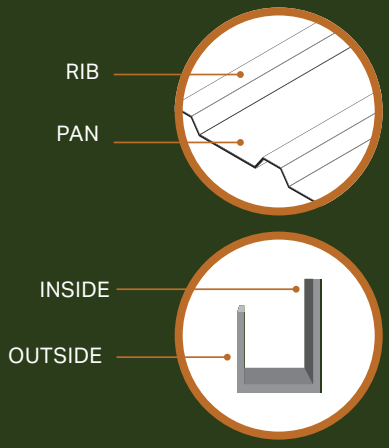

COMPONENTS CHECKLIST

Please check all components carefully and advise your supplier immediately if any discrepancies. Remember to quote the code on the front page.

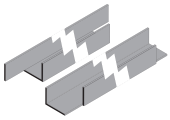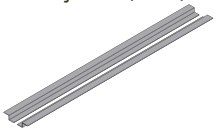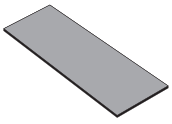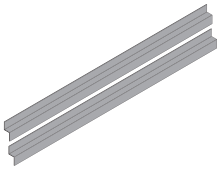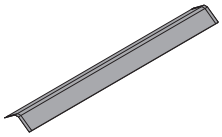A 2 x 1830mm x 780mm door sheet 	**B** 2 x narrow sloping 1950mm x 715mm sheets (beside door) 	**C** 6 x 1830 x 780mm (side walls) 	**D** 6 x 1600mm x 780mm sheets for roof 
E 4 x sloping sheets that will make up gable panels for the end wall 	**F** 2 x 3000mm 'U' channels for front and back walls (bottom) 	**G** 4 X 2255MM 'U' CHANNELS FOR ROOF 	**H** 4 x 2255mm 'U' channels with cut outs for side walls. 
I 2 x 3045mm 'U' channels for end walls (top) 	**J** 4 x 1830mm 'U' channels (door sides) 	**K** 2 x 1586mm 'U' channels (door spacers) 	**L** 4 x 780mm 'U' channels (door top and bottom) 
M 4 x 1600mm 'L' flashings (roof to side flashings) 	**N** 2 x 1950mm & 1 x 1830mm 'Z' door jambs (front) 	**O** 2 x 310mm door plates 	**P** 1 x Rivet & padbolt pack 2 x hinge packs 1 x Double padbolt pack 
Q 4 x 'Z' door braces 	**R** 1 x 2280mm long ridge beam (roof) 	**S** 2 medium gable plates for gable ends 	**T** 1 x Large gable plate (above door) 1 x 1620mm 'L' Flashing 

ⓘ If you choose to vary from these instructions your warranty will be impaired.

STEP 1 SIDE WALLS X 2

YOU WILL NEED	
C	6 x 1830mm x 780mm sheets
H	2 x 2255mm 'U' channels

Join the three sheets C together with 2 fixings through the overlapping ribs, making sure the ends of the sheets are flush. Cap the sheeting with the 2255mm 'U' channels H. This will finish 10-15mm shorter than the sheet.


Fix the channels through the end ribs and every second rib in between.

Make sure you put at least one fixing per sheet up through the underside of the channel into the pan of the sheet.

Perform the same again for the other side.




Channels will come short of the ends of the sheeting by 10-15mm on all panels.

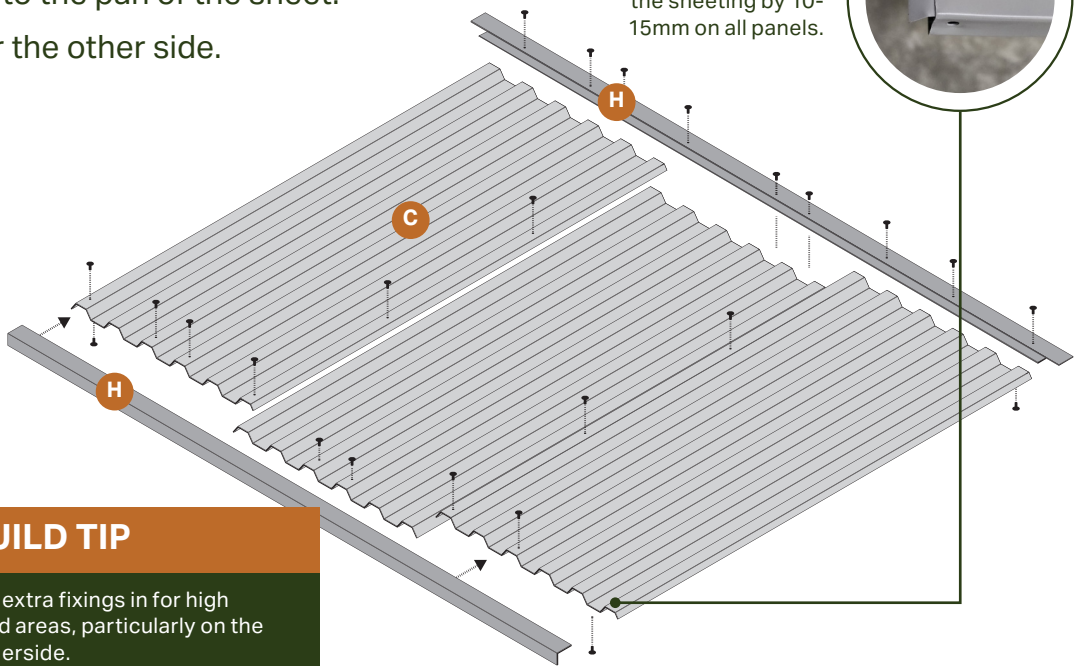

CHANNELS WITH CUTOUTS

The cutouts go to the inside of the panel to allow easy fitment of the end walls on assembly. Note top and bottom channels have different cutouts!

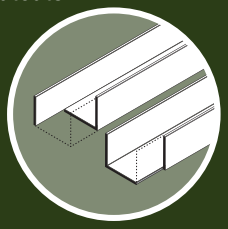

TOP CHANNEL BOTTOM CHANNEL

BUILD TIP

Put extra fixings in for high wind areas, particularly on the underside.

STEP 2 ROOF


YOU WILL NEED	
D	6 x 1600mm x 780mm sheets for roof
G	4 x 2255mm 'U' channels
M	4 x 1600mm 'L' flashings
R	1 x 2280mm long ridge beam (roof)


Join the sheets D together, same as the back. Cap the sheeting with the 2255mm 'U' channels G. Fix the channels at every second rib but not the corners at this stage. Place the short flange of the first 'L' flashing M on top of the rib at one end.

Make sure the ends are flush with the sheeting (as shown below) and put one fixing in the centre to hold the 'L' flashing. Fix the corners through the channels and one more between the corner and the centre fixing. Fit the ridge beam R to 1 roof panel only.

Fix through the ends and up through the internal flange on the underside.

Perform the same at the other end.

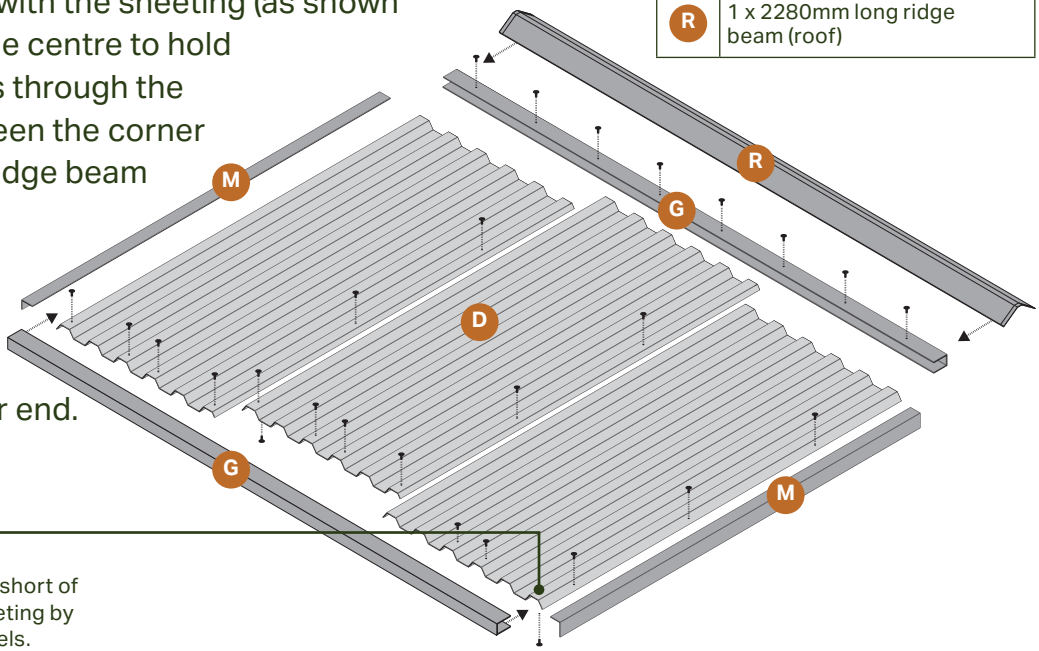

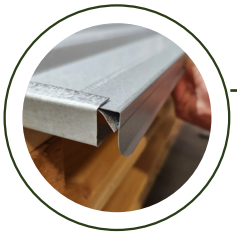

Channels will come short of the ends of the sheeting by 10-15mm on all panels.

If you choose to vary from these instructions your warranty will be impaired.

STEP 3 BACK WALL

YOU WILL NEED	
E	4 Sloping sheets that will make up panel for end wall
F	1 x 3000mm 'U' channels (bottom)
I	1 x 3045mm 'U' channels (top)
S	1 medium and 1 small gable plate

Join 4 E sheets together to create a gable end wall as shown.


Cap the bottom of the sheets with an F 3000mm channel.

Cap the angled top of the sheets with a 3045mm channel. With tin snips make a cut on the top and bottom of the channel at 1522.50mm (center) and then fold channel to follow the angle of the sheeting.

Slip the flat S gable plate between the channel and the sheeting on the outside of the wall. Take the other S gable plate and slip it between the channel and the sheeting on the underside of the wall.

Rivet the channels at every 2nd rib and through the gable plate into the sheeting ribs.

Drill and rivet 3 rivets to the underside of the wall through the channel and into the wall pan of the sheet.

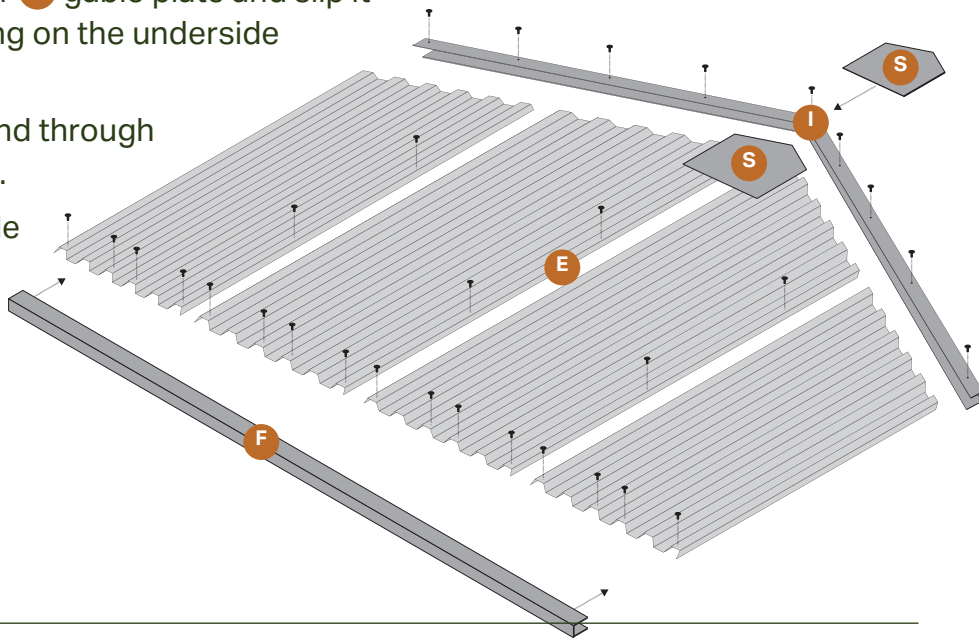


STEP 4 DOOR ASSEMBLY

YOU WILL NEED	
A	2 x 1830mm x 780mm door sheets
J	4 x 1830mm 'U' channels
L	4 x 780mm 'U' channels
O	2 x 310mm door plate
P	Hinges
N	1 x 1830mm 'Z' door jamb

Attach the 780mm 'U' channels L to the top and bottom of the door sheet A at the centre ribs only. Attach the 1830mm 'U' channels J to the door sheet A through the top and bottom channels L at the four corners. Attach the door plate O in the center of the door sheet, slipping it under the 'U' channel and fixing it to the sheet ribs and the side 'U' channel. Attach the hinges P approx 150mm from the top and bottom of the door through the 'U' channels. The fixings should be centred on the side 'U' channels.

Turn the door over and fix the four corners through all the 'U' channels.

Perform the same again for the second door but this time adding the 1830mm N Z door jamb as shown.

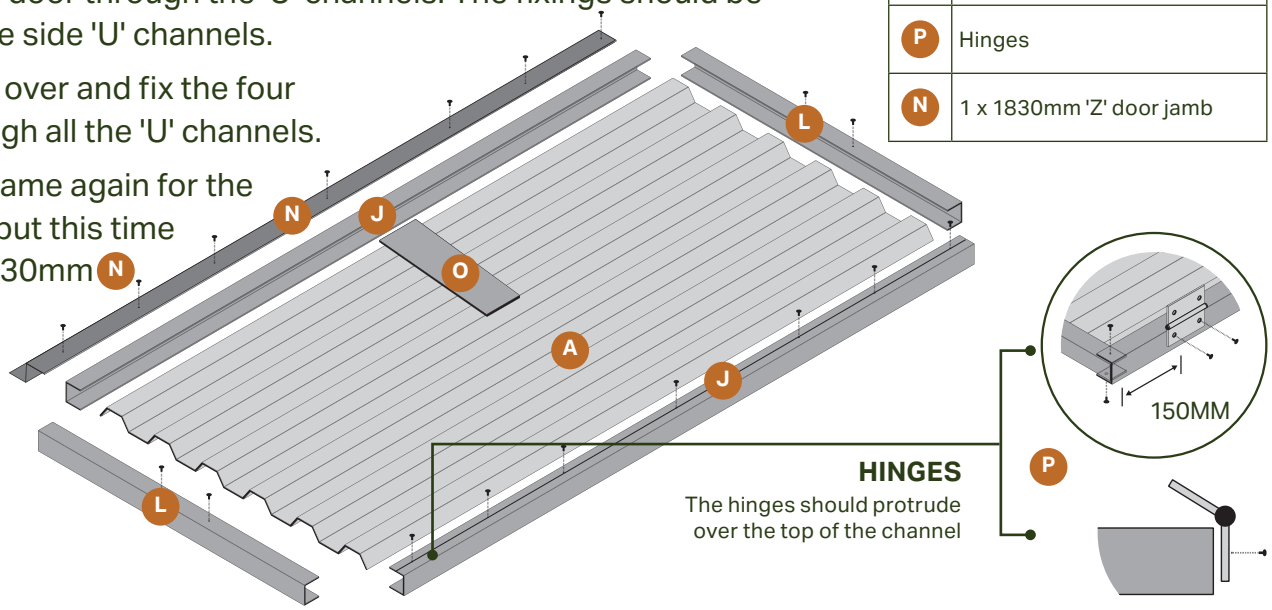

If you choose to vary from these instructions your warranty will be impaired.

STEP 5 DOOR BRACES

YOU WILL NEED	
Q	2 x 'Z' Door braces
P	Fixings

The door braces can be fitted now. Tuck one end of the 'Z' between the bottom channel of the inside of the door and the sheet in the corner. Do the same at the top tucking it behind the door side, the two 'Z' channels should overlap in the centre behind the padbolt.


Rivet the 'Z's at the ends where they overlap, and through each 'Z' into the channel they are tucked under at each end. Two or three more fixings will be required through the door sheeting into the 'Z'. Drill from the 'Z' side but rivet through from the outside of the door for a neater appearance. You may need to cut or bend the flange at the bottom and the top of the 'Z' if it catches on the door jamb when opening or closing (see diagram 1 below).

The two extra padbolts are fitted to the tops and bottoms of the inside of the secondary door as shown in the pictures. Fixings need to go from the outside thru the "Z" door jamb and from the inside thru the door frame (channel). The padbolt keeper is attached to the top channel and bottom channel if needed.



PADBOLTS
Fix the padbolts to the **inside** of the shed door

DIAGRAM 1

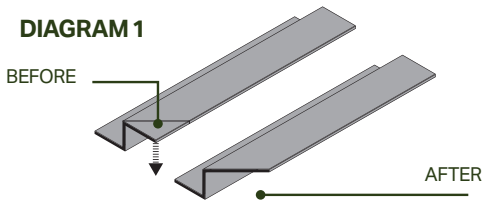


STEP 6 HANGING THE DOOR

YOU WILL NEED	
B	2 x Narrow sloping 1950H x 715mm wide sheets
N	2 x 1950mm 'Z' door jambs

Attach the first 'Z' door jamb N to the 715mm sheet B on the rib with the narrow pan. Attach the other 'Z' door jamb to the 715mm sheet. Lay the premade door face down on the 330mm sheet B approx 30mm up from the bottom.

Fix the hinges through the side of the 'Z' door jamb N raising the door about 4mm off the 'Z' door jamb. Repeat the procedure for the second door.

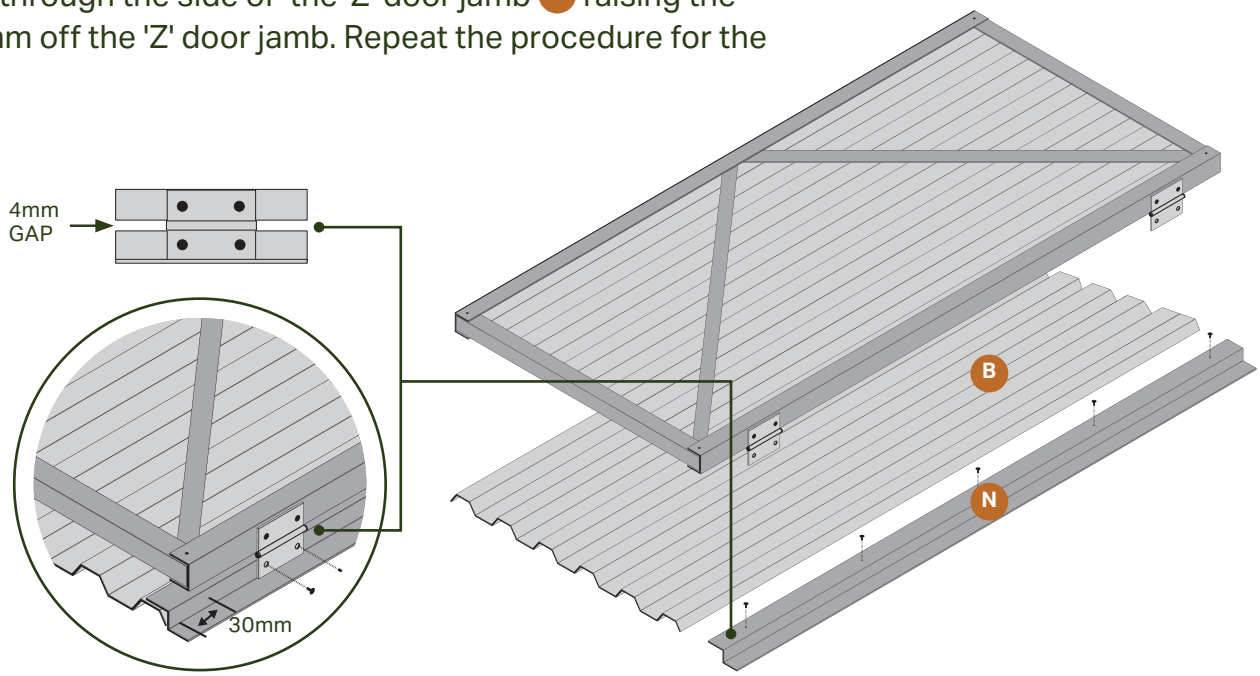


STEP 7 FRONT WALL

Lay out the door with the sheet attached and the corner door jamb with the 'U' channel attached L (as shown below). Cap the bottom sheets with the 3000mm channels H. Cap the top sheets with the 3045mm channels I. Use the door spacers K to make sure the door fits the gap (they sit on top of the 'Z' door jambs. Drill and fix (rivet) the channels at every second rib down through the top. Attach the door spacers at each end through the 'Z' door jambs and channels. Drill and fix the underside through the channels into the sheeting pan and the top and bottom of the door spacers and 'Z' door jambs (as shown below).Fit the padbolt to the door strap on the outside of the door using wide flange rivets.

YOU WILL NEED

I	1 x 3045mm channel (top)
H	1 x 3000mm channel (bottom)
K	2 x 1586mm 'U' channels (door spacers)
B	2 X 1950mm Sloping Sheets
L	2 x 'Z' door jambs (attached to B)
P	Padbolts
T	1 x Large gable plate for above door 1 x 1620mm L flashing

See the diagram below for the correct fitment of elements to make up the top section of your shed.

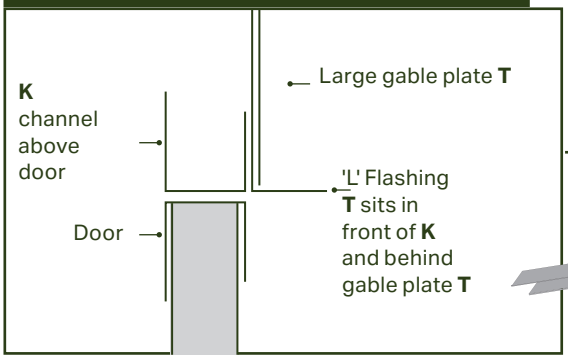


Top Padbolt




Channels will come short of the ends of the sheeting by 10-15mm on all panels.

FITTING CHANNELS

The higher side of the channel goes to the inside of the shed.
It is very important to include the rivets on the inside of all the channels as they are structural.

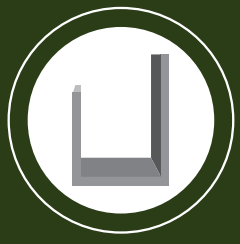

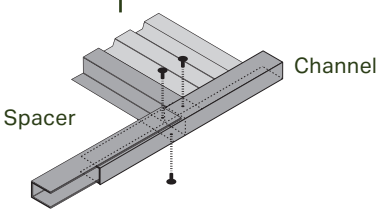

Fix through the top and bottom of the channels into the door jamb and spacer. The door jamb goes on inside of the channel.



Bottom Padbolt

If you choose to vary from these instructions your warranty will be impaired.


STEP 8 INSTALLATION

WALL ASSEMBLY

- When standing up the panels, we recommended you stand them up on your floor kit / foundation. Now, please make sure your foundations are level.
- Stand up the back wall and as your helping hand is holding it up, bring the left end wall in to meet it at the left corner (diagram 1) overlapping the corners (diagram 2).
- Drill and rivet at approximately 50mm down from the top and up from the bottom, drilling and riveting from the outside.
- Bring the right end wall into the right back corner and perform the same again, checking to make sure the walls are sitting flat at the bottom. Bring the front wall into place and join the front corners to the end walls, same as the back (diagram 3).
- Finish joining the corners by riveting at approximately 200-300mm apart. You will find it easier to drill these corners if they are supported on the inside (see tip).

FIXING THE ROOF

- The gable roof comes in 2 peices. With a person at each end of the first roof panel (it will have the ridge beam attached to it as described in step 2). Lift the roof panel over the top of your upright walls and lower down on top. Once the roof is sitting on top of the walls then make sure the center of the ridge beam is centered with the center of the gable end walls. Once the first half of the roof has been placed down, drill and rivet through the L Flashing at each end of the roof. Drill and rivet 150mm from the front or back wall as shown in diagram 4. If it is difficult to get the same overhang at each end, this will probably be caused by an unlevel site or walls that are not square. Adjust and level the shed accordingly.
- With the first roof half in place, you can now install the other half of the roof panels. Simply slide the other roof panel up the gable wall and feed it into the ridge beam.
- Once you have located the roof panel you can then finish off riveting the ends of the roof L's at 300mm apart, then rivet in through the ridge cap ends and into the L flashings and up through the internal ridge beam flange on the underside.
- Using the ladder and the tape measure, rivet down through the top of the roof, through the pan into the top channel of the front and the back walls (10mm more than the overhang). Rivet beside every second rib. You will not need to worry about these rivets leaking as any water seeping through will end up on the outside of the walls.
- Make sure to clean all swarf from your roof once you have finished installing the roof panels. left over swarf will cause surface rust spots on your shed.

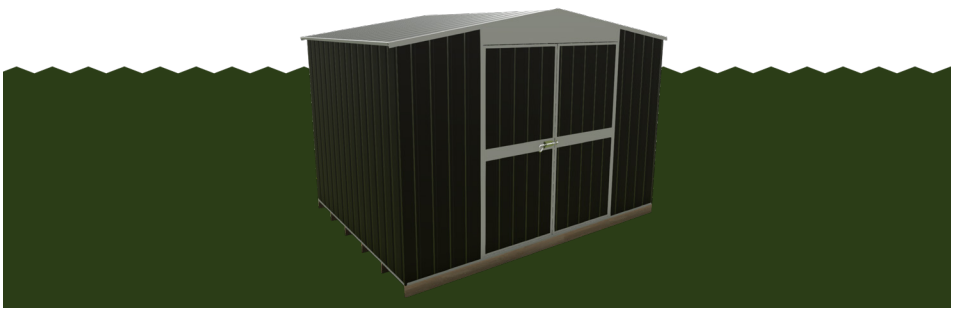

BUILDING YOUR SHED

The basic task is to join the sheets together to form your panels, and fix channels to the top and bottom of these panels.

They will then join together to form your shed (diagram 1, 2, 3 and 4).

DIAGRAM 1

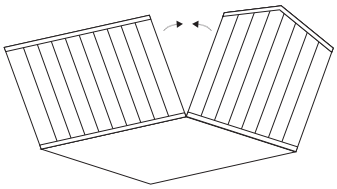


DIAGRAM 2

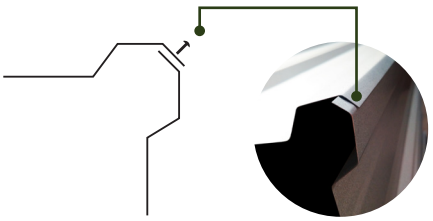


DIAGRAM 3


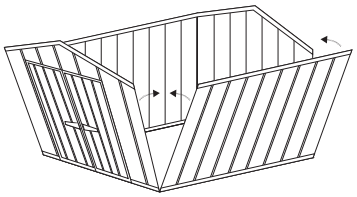


DIAGRAM 4



L FLASHING
Rivet through the side of the 'L' flashing to secure the roof to the side of the shed.

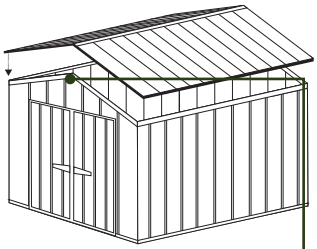


BUILD TIP


Use the handle end of a hammer in the inside of the corner, but beware of drilling holes on the end of your hammer!


STEP 9 COMPLETE YOUR SHED

RECESSED CONCRETE FLOOR PLAN FOR SPECIALLY POURED CONCRETE FLOORS:

Every shed must have some type of foundation between it and the ground. You can pour a concrete floor and use recessed floor clamps, use an existing concrete base with flat floor clamps or purchase a kitset wooden floor from your nearest reseller.

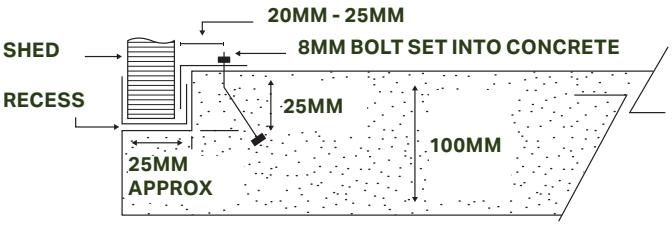

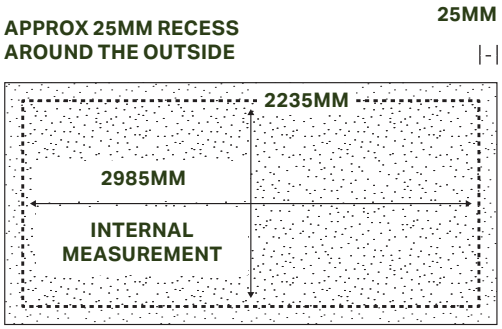


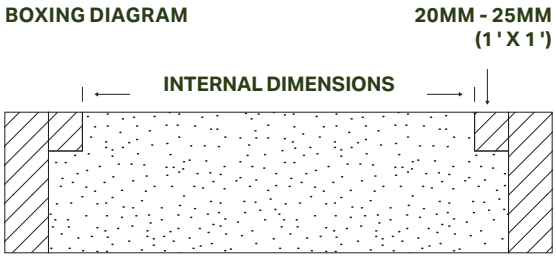

3030x2280 GABLE ROOF SHED INTERNAL DIMENSIONS	2985mm x 2235mm


RECESSED FLOOR CLAMPS

For poured floors with a recess around the perimeter.

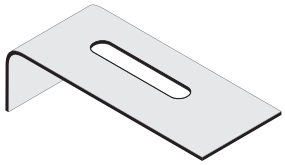

FLAT FLOOR CLAMPS

For existing concrete only. Water can seep underneath.

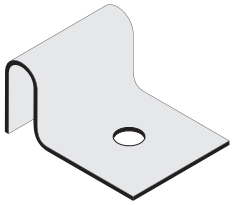

KITSET WOODEN FLOORS

Every shed must have a floor. These are available from your local reseller or contact info@storetech.nz

ATTACH YOUR SHED TO THE FLOOR OR CONCRETE PAD NOW!


Fix your shed down to its foundations as soon as it is assembled. If your foundations are unlevel or bowed, you will have problems with your padbolt and door levels. This can be fixed by slipping a spade under either door jamb and lifting. You will soon get a feel for which side needs packing/propping up.


Important

- Do not attempt to assemble panels in rain or windy conditions.
- Make sure your foundations are squared and level before erecting panels.
- It is easier to remove all swarf (filings) before you stand your walls up.
- Complete all panels before erecting your shed.
- Keep a firm grip on panels when handling. Slips may cause damage.
- Always wear non-slip gloves, protective footwear and eyewear.

Your shed's floor

- It is essential that every shed has a floor, but the only way to make sure your shed is there to stay on windy sites is with a recessed concrete floor.

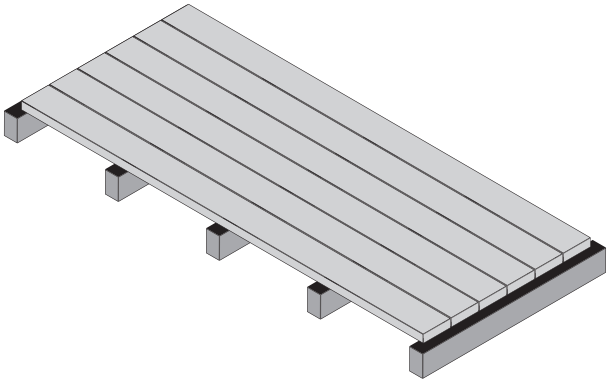

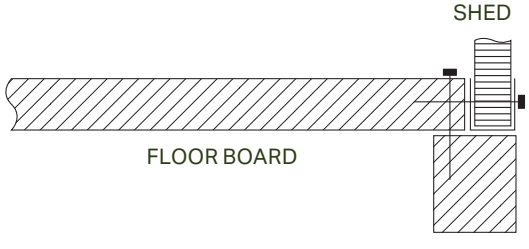

Peg the floor to the ground in a windy area

If you choose to vary from these instructions your warranty will be impaired.